


# Main Flash (PDL\_MFlash)

1.0

## Features

- Erasing data by-sector or by all-sector collectively
- Writing data by byte or by half words (16 bits )
- CPU mode
- ROM writer mode

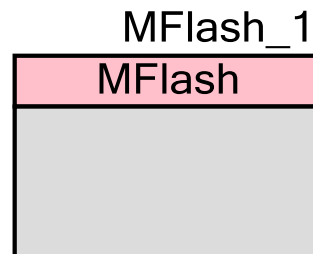

## General Description

The Peripheral Driver Library (PDL) Main Flash (PDL\_MFlash) component provides support for working with Main Flash.

This component uses firmware drivers from the PDL\_MFlash module, which is automatically added to your project after a successful build.

## When to Use a PDL\_MFlash Component

Before using the Main Flash operation APIs, make sure the code is operated in RAM area.

## Quick Start

1. In an empty schematic file, drag a PDL\_MFlash component from the Component Catalog FMx/System/Memory/Main Flash folder onto your schematic. The placed instance takes the name MFlash\_1.
2. There is no need to open Configure dialog. This component doesn't provide any parameters.
3. Build the project to verify the correctness of your design. This will add the required PDL modules to the Workspace Explorer and generate configuration data for the MFlash\_1 instance.
4. In the *main.c* file, initialize the peripheral and start the application.

```
MFlash_WriteData16Bit_Fm0Type3CrAndSecureArea((uint16_t*)0x100004, (uint16_t
*)&i, 1);/* Write flash in CR data area */
MFlash_SectorErase((uint16_t*)sector);
```

5. Build and program the device.

## Component Usage

After a successful build, firmware drivers from the PDL\_MFlash module, are added to your project in the pdl/drivers/flash folder. Pass the generated data structures to the associated PDL functions in your application initialization code to configure the peripheral.

### Generated Data

The PDL\_MFlash component doesn't populate any peripheral initialization data structure(s).

Once the component is initialized, the application code should use the peripheral functions provided in the referenced PDL files. Refer to the PDL documentation for the list of provided API functions. To access this document, right-click on the component symbol on the schematic and choose “**Open API Documentation...**” option in the drop-down menu.

### Data in RAM

The generated data may be placed in flash memory (const) or RAM. The former is the more memory-efficient choice if you do not wish to modify the configuration data at run-time. Under the **Built-In** tab of the Configure dialog, set the parameter CONST\_CONFIG to make your selection. The default option is to place the data in flash.

### Code Examples and Application Notes

There are numerous code examples that include schematics and example code available online at the [Cypress Code Examples web page](#).

Cypress also provides a number of application notes describing how FMx devices can be integrated into your design. You can access the Cypress Application Notes search web page at [www.cypress.com/appnotes](http://www.cypress.com/appnotes).

## Resources

The PDL\_MFlash component uses the Main Flash (MFlash) peripheral block.

## References

- [FM0+ Family of 32-bit ARM® Cortex®-M0+ Microcontrollers Peripheral Manuals](#)
- [Cypress FM0+ Family of 32-bit ARM® Cortex®-M0+ Microcontrollers](#)



## Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.0	Initial Version	

© Cypress Semiconductor Corporation, 2016. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit [cypress.com](http://cypress.com). Other names and brands may be claimed as property of their respective owners.

