


Low Power Modes (PDL_LPM)

1.0

LPM_1

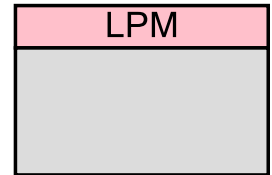

Features

- Run modes
- Standby modes
 - Sleep modes
 - Timer modes
 - RTC mode
 - STOP mode
- Deep Standby modes

General Description

To reduce the power consumption, the system provides low power consumption mode. This enables the use of SLEEP, TIMER, RTC and STOP standby modes and deep standby RTC and deep standby STOP deep standby modes.

This component uses firmware drivers from the PDL_LPM module, which is automatically added to your project after a successful build.

When to Use a PDL_LPM Component

Use the PDL_LPM component when you need to reduce power consumption of the microcontroller.

Quick Start

1. Drag a PDL_LPM component from the Component Catalog FMx/System/Low Power Modes folder onto your schematic. That placed instance takes the name LPM_1.
2. There is no need to open Configure dialog. This component doesn't provide any parameters.
3. Build the project to verify the correctness of your design. This will add the required PDL modules to the Workspace Explorer and generate configuration data for the LPM_1 instance.

4. In the *main.c* file, initialize the peripheral and start the application:

```
en_lpm_mode_t enMode = StbSleepMode;
boolean_t bIoRemain = 1;
Lpm_GoToStandByMode(enMode, bIoRemain);
```

5. Build and program the device.

Component Usage

After a successful build, firmware drivers from the PDL_LPM module, added to your project in the `pdl/drivers/lpm` folder. Pass the generated data structures to the associated PDL functions in your application initialization code to configure the peripheral.

Generated Data

Once the component is initialized, the application code should use the peripheral functions provided in the referenced PDL files. Refer to the PDL documentation for the list of provided API functions. To access this document, right-click on the component symbol on the schematic and choose “**Open API Documentation...**” option in the drop-down menu.

Preprocessor Macros

The LPM component generates the following preprocessor macro(s). Note that each macro is prefixed with the instance name of the component (e.g. “LPM_1”).

Macro	Description
LPM_1_SetPinFunc_WKUP	Macro to configure wake up pin. Number of the wakeup pins may vary, it depends on used device. For Volans this pin macro won't generated, for Berrypecker can be generated 12 pins, for Crane devices can be generated 8 pins.

Data in RAM

The generated data may be placed in flash memory (const) or RAM. The former is the more memory-efficient choice if you do not wish to modify the configuration data at run-time. Under the Built-In tab of the Configure dialog set the parameter `CONST_CONFIG` to make your selection. The default option is to place the data in flash.



Code Examples and Application Notes

There are numerous code examples that include schematics and example code available online at the [Cypress Code Examples web page](#).

Cypress also provides a number of application notes describing how FMx devices can be integrated into your design. You can access the Cypress Application Notes search web page at www.cypress.com/appnotes.

Resources

The PDL_LPM component uses the Low Power Modes (LPM) peripheral block.

References

- [FM0+ Family of 32-bit ARM® Cortex®-M0+ Microcontrollers Peripheral Manuals](#)
- [Cypress FM0+ Family of 32-bit ARM® Cortex®-M0+ Microcontrollers](#)

Component Errata

This section lists known problems with the component.

Cypress ID	Component Version	Problem	Workaround
254396	1.0	LPM is not supported on S6E1A devices. There is a defect in the LPM driver that prevents its use on S6E1A devices. The defect does not impact S6E1B or S6E1C devices.	None. Contact Cypress technical support (http://www.cypress.com/mycases) for possible firmware updates and help with implementing external interrupts on S6E1A devices.



Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.0	Initial Version	

© Cypress Semiconductor Corporation, 2016. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.

