

F²MC - 8FX Family, MB95200 Series, How to make Programming on Target Board

Programming to target board is a very important step for project design. This document shows you how to make programming to target board. In this part, you can realize the programming function process. The programming interface in this document could be used as an in-circuit debug and in-circuit programming tool.

Contents

1	Introduction.....	1	5.1	Use MB95200 Series USB Programmer to Program.....	7
2	Application Environment.....	2	5.2	Use F ² MC-8L/8FX SOFTUNE to Program.....	9
2.1	Programming Tool	2	6	Trouble Shooting.....	12
2.2	SOFTUNE.....	2	6.1	Solve the Error Message Window from USB Programmer.....	12
2.3	USB Programmer.....	3	6.2	Solve the Error Message Window from SOFTUNE.....	12
3	MCU Products	4	7	Additional Information.....	12
4	Hardware Design.....	5		Document History.....	13
4.1	Single Flash MCU Programming Circuit	5			
4.2	Dual Flash MCU Programming Circuit	6			
5	Programming Process	7			

1 Introduction

Programming to target board is a very important step for project design. This document shows you how to make programming to target board. In this part, you can realize the programming function process.

The programming interface in this document could be used as an in-circuit debug and in-circuit programming tool.

2 Application Environment

This chapter introduces the application environment of MB95200H/210H SOP20 PGM adaptor.

2.1 Programming Tool

The debug tool is BGMA (BGM Adaptor), the type of it is MB2146-08-E, as below picture. It can be gotten from MB95200 MCU Starter Kit (PN: MB2146-410-01-E).

Figure 1. BGM Adaptor



2.2 SOFTUNE

SOFTUNE is used to program and debug, as software development environment. The version of it is F²MC-8L/8FX SOFTUNE Workbench V30L31, as below picture. It can be gotten from MB95200 MCU Starter Kit (PN: MB2146-410-01-E)


Figure 2. SOFTUNE Version



2.3 USB Programmer

The MB95200 series USB programmer is as below picture.

Figure 3. MB95200 Series USB Programmer

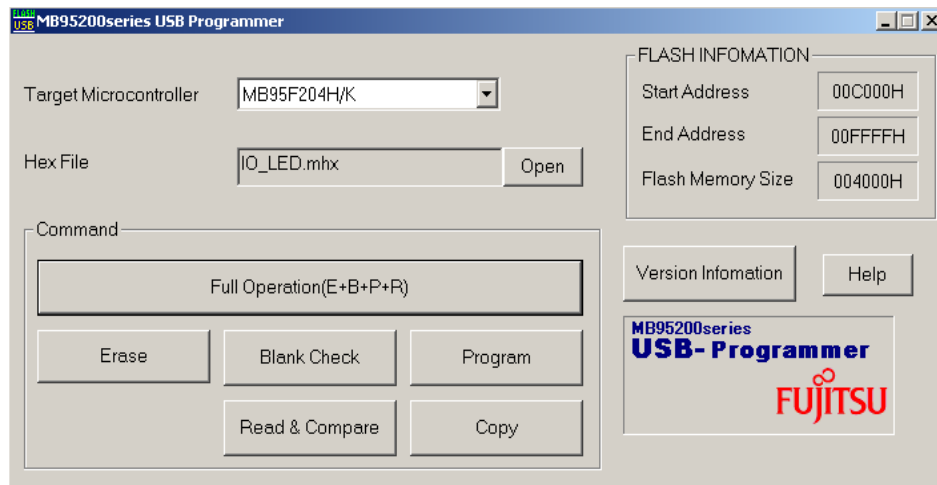

3 MCU Products

This chapter introduces MCU product which is suit to this document.

This in-circuit programming circuit have some differences between single flash MCU and dual flash MCU. This part will list you the two types of MCU as follow.

Table 1. MCU Products

Series	Flash Type	Chip list	Series	Flash Type	Chip list
MB95F200H	Single Flash	MB95F202K	MB95F260H	Dual Flash	MB95F262K
		MB95F202H			MB95F262H
		MB95F203K			MB95F263K
		MB95F203H			MB95F263H
		MB95F204K			MB95F264K
		MB95F204H			MB95F264H
MB95F210H	Single Flash	MB95F212K	MB95F270H	Dual Flash	MB95F272K
		MB95F212H			MB95F272H
		MB95F213K			MB95F273K
		MB95F213H			MB95F273H
		MB95F214K			MB95F274K
		MB95F214H			MB95F274H
MB95F220H	Single Flash	MB95F222K	MB95F280H	Dual Flash	MB95F282K
		MB95F222H			MB95F282H
		MB95F223K			MB95F283K
		MB95F223H			MB95F283H
					MB95F284K
					MB95F284H
			MB95F330H	Dual Flash	MB95F332K
					MB95F332H
					MB95F333K
					MB95F333H
					MB95F334K
					MB95F334H

4 Hardware Design


This chapter introduces programming steps using either MB95200 series USB programmer or F²MC-8L/8FX SOFTUNE Workbench V30L31.

As Chapter 3 shows that the MCUs have two types, the debug circuit have any differences. This chapter will give you the different types MCU programming circuit.

4.1 Single Flash MCU Programming Circuit

The follows figure shows the circuit diagram of the in-system programming interface. To design this in-system programmer interface, we need four pins, UVCC_EV, GND, RSTIN, and DBG. (RST_OUT if necessary, please add it).

Figure 4. Basic Circuit for Single Flash MCU

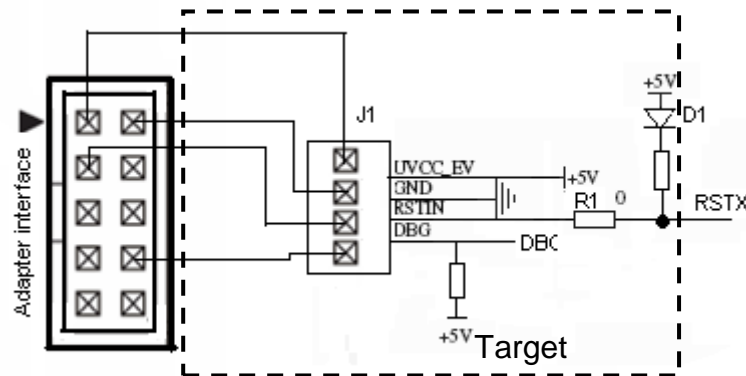

Components Recommendation:

D1: $V_F < 0.3V$ when $I_F = 1mA$. E.g. LL103A, 1SS294


Following list shows the functions of the interface connector.

1. J1 is a 10 pins connector which is the interface of this circuit.
2. The write voltage ($V_{CC} = 4.5V$ to $5.5V$) is supplied from the user system. UVCC_EV and DBG pin timing controls the PGM mode entry.
3. Pin2 of the connector used to connect the GND.
4. Programmer provides 10V directly to RSTX pin during flash erase/write operation. If it is pulled high in user system, please consider to add a low-drop diode for separate H voltage.
5. DBG pin provides 1-line UART communication with the Programmer. Serial write mode can be set if provide special timing of DBG and VCC pin.

4.2 Dual Flash MCU Programming Circuit

The follows figure shows the circuit diagram of the in-system debug interface. To design this in-system programmer interface, we need three pins, UVCC_EV, GND and DBG. (RST_OUT if necessary please add)

Figure 5. Basic Circuit for Single Flash MCU

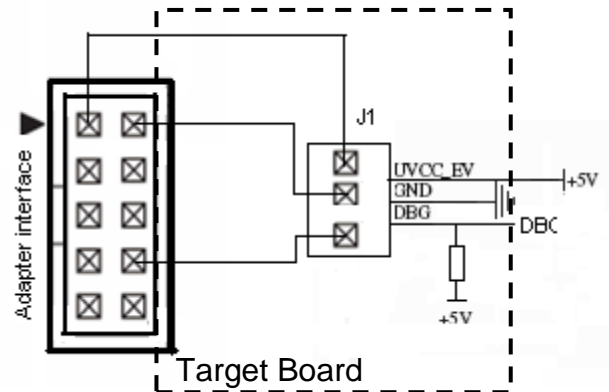

Components Recommendation:

D1: $V_F < 0.3V$ when $I_F = 1mA$. E.g. LL103A, 1SS294

Following list shows the functions of the interface connector.

1. J1 is a 10 pins connector which is the interface of this circuit.
2. The write voltage ($VCC = 4.5V$ to $5.5V$) is supplied from the user system. UVCC_EV and DBG pin timing controls the PGM mode entry.
3. Pin2 of the connector used to connect the GND.
4. DBG pin provides 1-line UART communication with the Programmer. Serial write mode can be set if provide special timing of DBG and VCC pin.

5 Programming Process

5.1 Use MB95200 Series USB Programmer to Program

5.1.1 Hardware Connection

1. Connect BGM adapter with computer by USB, then connect it with target board.




2. Power up MCU on the target board. Please note: user must give the power supply to the target board after connecting target board with BGM adaptor.

5.1.2 Programming Step


1. Open MB95200 series USB programmer
2. Select MCU type
3. Select mxh file at the path: Current project DIR\Debug\ABS

Figure 6. Select MCU Type and Hex File

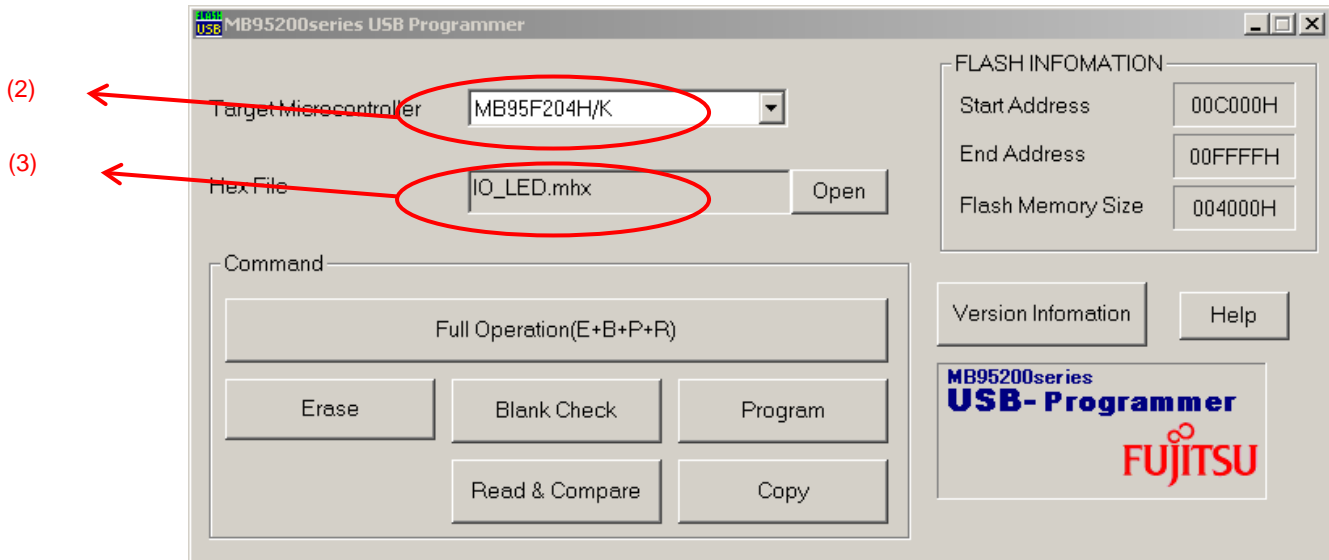

4. Click **Full Operation** to do programming.

Figure 7. Click Full Operation

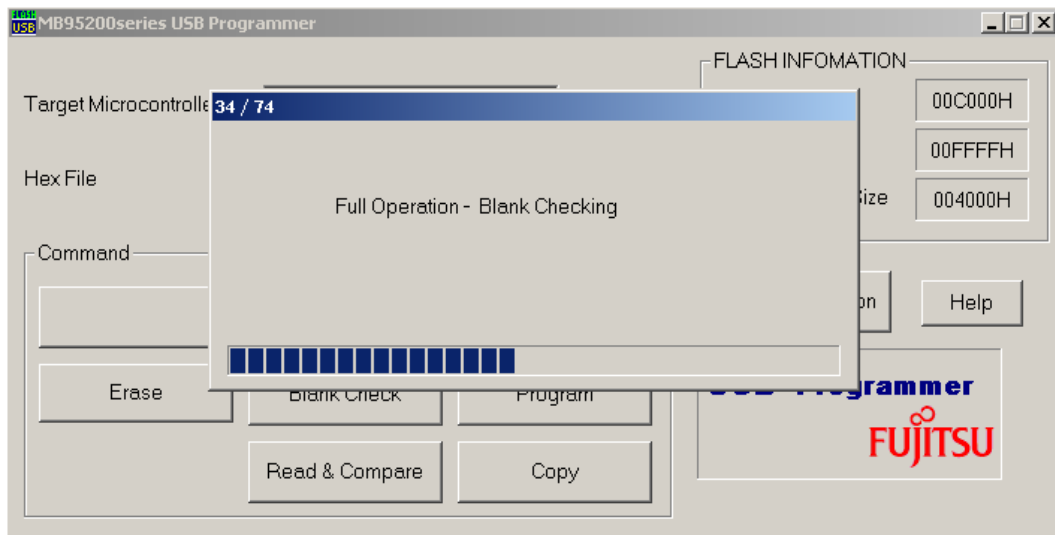


5. The USB programmer also provides single operation, including Erase, Blank Check, Program, Read & Compare and Copy.

5.2 Use F²MC-8L/8FX SOFTUNE to Program


1. Connect BGMA to PC
2. Connect EV-board to BGMA
3. Power on the EV-board

Figure 8. Indicate Process 1-3

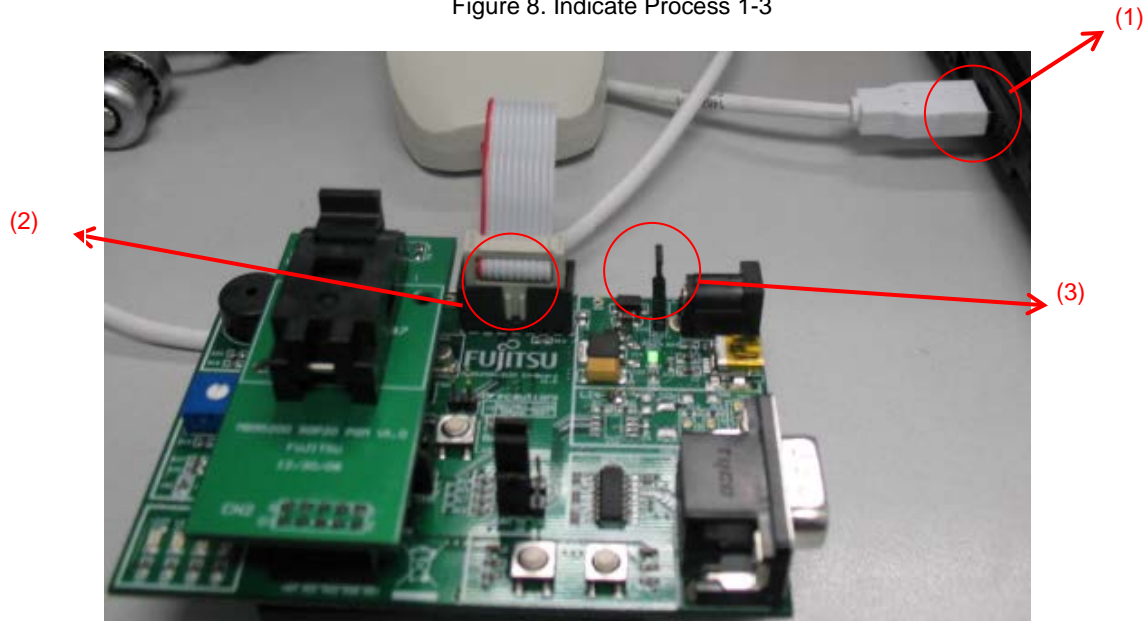


4. Open a project (E.g. IO_LED) using SOFTUNE

Figure 9. Open Demo Project

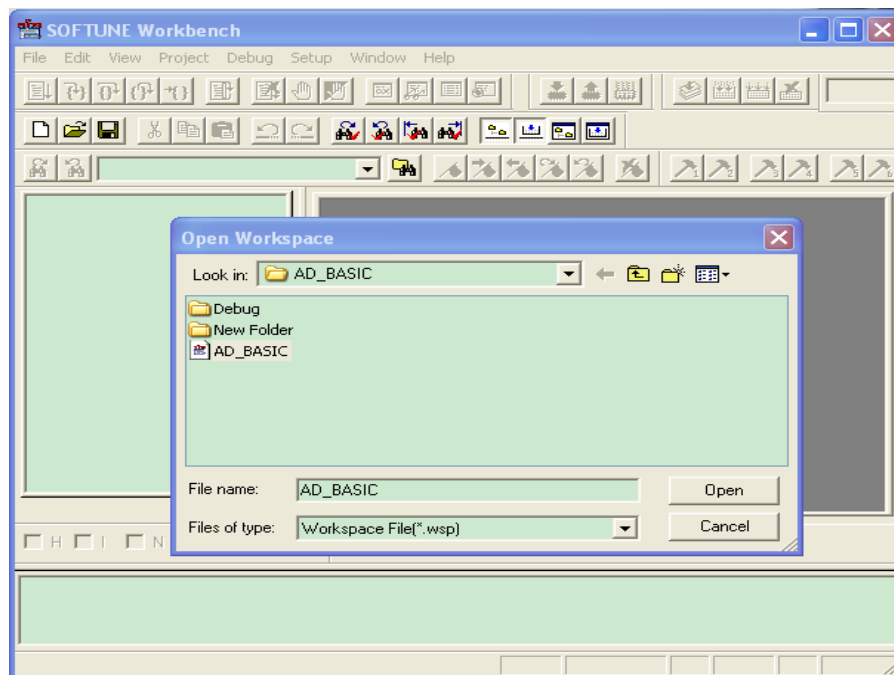


5. Start debug.

Figure 10. Start Debug

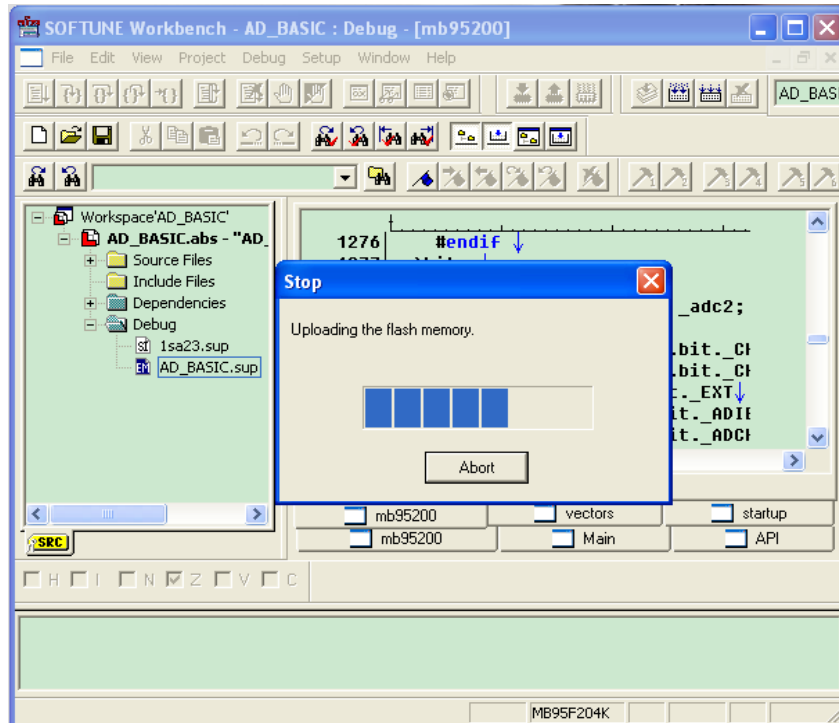

6. Run a step, and the system begin to program. (Press F5 or F6 on the keyboard or click step in or step over in the workbench)

Figure 11. Begin to Program

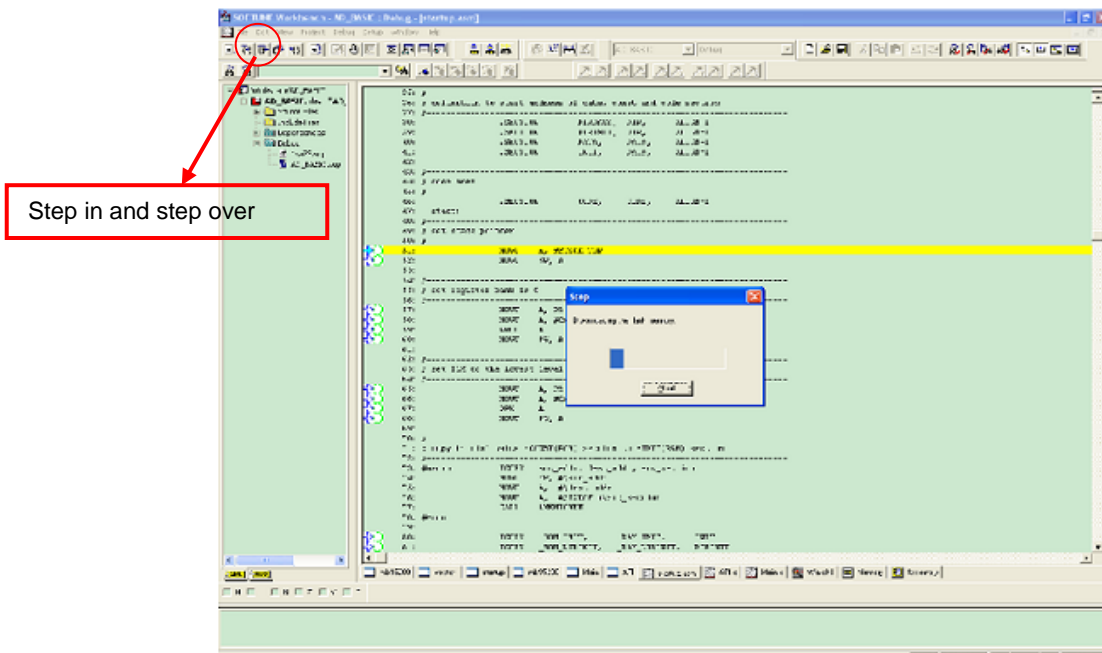

Note: SOFTUNE will change watchdog bit in MCU with watchdog setting(as follows), but USB programmer (include dedicated software) will not, so when use SOFTUNE to debugging and programming, please pay more attention on watchdog setting, below are 2 conditions to use watchdog:

1. Use SOFTUNE debugging and programming:
-Set SOFTUNE watchdog setting the same as code setting, enable or disable
2. Use USB programmer (include dedicated software) to programming:
-Just enable watchdog or disable watchdog in code.

For how to use watchdog, please refer to “MCU-AN-500013-E-11 (Watchdog Timer Application Note)”

Figure 12. Watchdog Setting Menu


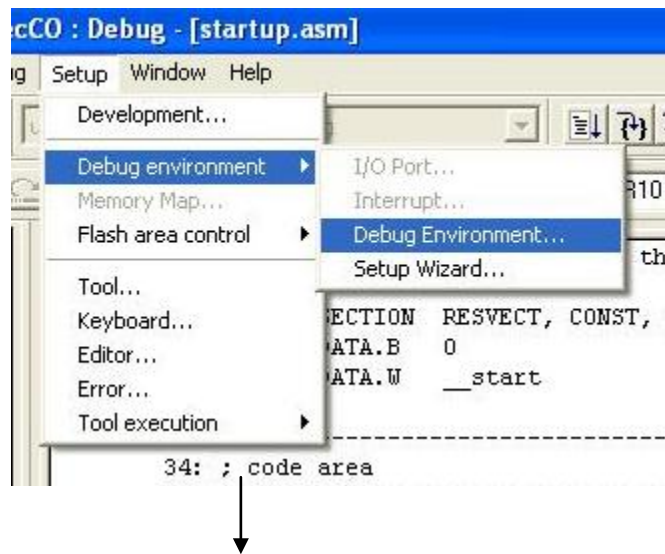


Figure 13. Watchdog Setting Option

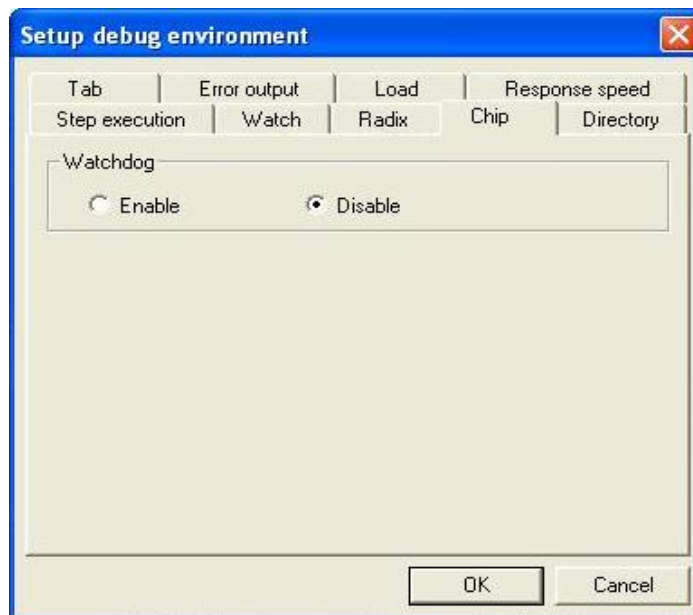


6 Trouble Shooting

6.1 Solve the Error Message Window from USB Programmer


1. When using the USB programmer, please choose the right target microcontroller type. Or error occurs as below.

Figure 14. Error about MCU Selection

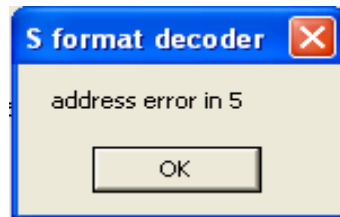

2. When user connects the power supply before BGM adapter connector, the error as below will occur.


Figure 15. Error about Connecting Order by Using USB Programmer

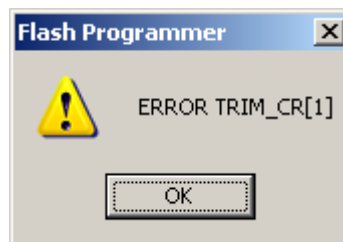

6.2 Solve the Error Message Window from SOFTUNE

1. When user connects the power supply before BGM adapter connector, the error as below will occur.

Figure 16. Error about Connecting by Using SOFTUNE

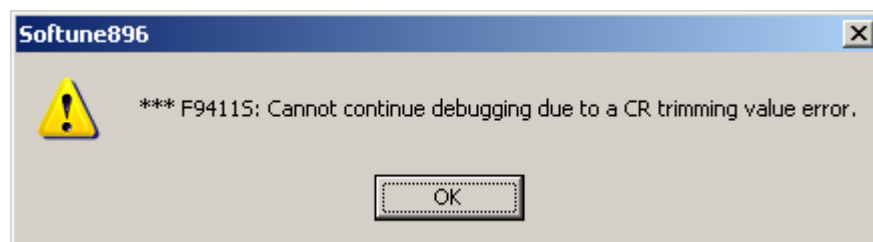

7 Additional Information

For more information about how to use MB9595200H/210H EV-board, BGM Adaptor and SOFTUNE, please refer to SKT MB2146-410-01-E User Manual, or visit following websites:

<http://www.cypress.com/cypress-microcontrollers>

<http://www.cypress.com/cypress-mcu-product-softwareexamples>

Document History

Document Title: AN205388 – F²MC - 8FX Family, MB95200 Series, How to make Programming on Target Board

Document Number: 002-05388

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	-	Benjamin. Yang	02/10/2009	V1.0, First Draft
			02/11/2009	V1.1, Modify
		Ivan. Xiao	01/11/2010	V1.1, Add a note to page 14.
*A	5267453	HUAL	05/11/2016	Migrated Spansion Application Note "MCU-AN- 500017-E-11" to Cypress format.



Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at [Cypress Locations](#).

Products

ARM® Cortex® Microcontrollers	cypress.com/arm
Automotive	cypress.com/automotive
Clocks & Buffers	cypress.com/clocks
Interface	cypress.com/interface
Lighting & Power Control	cypress.com/powerpsoc
Memory	cypress.com/memory
PSoC	cypress.com/psoc
Touch Sensing	cypress.com/touch
USB Controllers	cypress.com/usb
Wireless/RF	cypress.com/wireless

PSoC® Solutions

[PSoC 1](#) | [PSoC 3](#) | [PSoC 4](#) | [PSoC 5LP](#)

Cypress Developer Community

[Forums](#) | [Projects](#) | [Videos](#) | [Blogs](#) | [Training](#) | [Components](#)

Technical Support

cypress.com/support

PSoC is a registered trademark and PSoC Creator is a trademark of Cypress Semiconductor Corporation. All other trademarks or registered trademarks referenced herein are the property of their respective owners.



Cypress Semiconductor Phone : 408-943-2600
198 Champion Court Fax : 408-943-4730
San Jose, CA 95134-1709 Website : www.cypress.com

© Cypress Semiconductor Corporation, 2009-2016. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.